


## 2021 TAB 320 Winterization

- Turn handles to tank fill mode
- Drain everything in the unit. this includes the following
  - Fresh water tank drain below the unit on the passenger side - it will be labeled fresh water drain.
  - Low point drain valves - the red / blue drains inside nautilus compartment
  - Alde Yellow Flip up valve below the Bed on drivers side of unit (Hot Water Tank) - Flipped up/vertical is open and horizontal is closed.

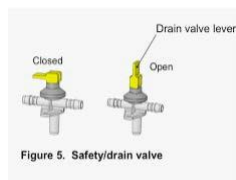

- Black and Gray tank gate valve
- Once everything has been drained you will want to blow out the lines - see nautilus manual for how to set handles
- Apply no more than 50psi through the city water inlet.
- Make sure all your drains are closed when doing this to build up pressure
- Then open every thing you did when draining ONE AT A TIME, including the yellow flip up valve for the Alde. This is to drain all your water lines and hot water tank, you would have drained your holding tanks in step 3.
- Once you have opened everything and blown the water out, remove the air hose and turn to winterize mode.
- See nautilus for winterize mode
- IMPORTANT - before you connect your hose to siphon antifreeze make sure the RED ALDE BYPASS valve is turned to bypass and not 'regular'. The bypass valve is in the nautilus compartment to the left of the nautilus panel.
- This will bypass the hot water tank - you will have this valve on bypass until you flush the system next year
- See the Siphoning / Winterization section in the nautilus. Note: USE NON-ETHANOL BASED ANTIFREEZE
  - Run the antifreeze through every water appliance / outlet. Including:
    - Sinks
    - Flush toilet
    - Shower
    - Exterior shower
- After everything is said and done. Pour antifreeze down the drains to protect the p-traps